

LTE Accessory Kit Installation Manual

PCLTE1

Kit Contents

Quantity	Description
1	GL7611 LTE Modem
1	LTE Antenna
1	USB Cable
2	Dual Lock Fasteners

Tools Required

- Needle Nose / Combination Nose Pliers
- Flat Head Screwdriver

(Kit is only suitable for use with XVT series inverters)



⚠ DANGER

Electrocution. Never touch terminals when inverter and PWRcell DC disconnects are ON. Doing so will result in death or serious injury.

(000686a)



⚠ DANGER

Electrocution. Do not wear jewelry while working on this equipment. Doing so will result in death or serious injury.

(000188)

⚠ DANGER

Automatic start-up. Disconnect utility power and render unit inoperable before working on unit. Failure to do so will result in death or serious injury.

(000191)



⚠ WARNING


Electrocution. Potentially lethal voltages are generated by this equipment. Render the equipment safe before attempting repairs or maintenance. Failure to do so could result in death or serious injury.

(000187)

Instructions


NOTE: Competent, qualified personnel should install, operate, and service this equipment. Strictly comply to local, state, and national electrical and building codes. When using this equipment, comply with regulations established by the National Electrical Code (NEC), CSA Standard; the Occupational Safety and Health Administration (OSHA), or the local agency for workplace health and safety.

1. Initiate inverter shutdown by pressing the red Shutdown button on the inverter front control panel.
2. Allow DC voltage to drop below 10VDC.
3. Open all PWRcell® DC Disconnects and verify DC voltage reported on LCD screen has dropped to below 10VDC.
4. Disconnect AC Grid source to inverter and wait for Inverter LCD screen to turn off.
5. Ensure all sources of AC and DC Power are disconnected.
6. Open inverter front cover to horizontal and push inward to lock in the open position.
7. Cover the top of the DC Breaker assembly to prevent debris from entering. Proceed to remove the knockout for the antenna, located on the upper left-hand side wall of the inverter enclosure.
8. Insert LTE antenna (A) and secure with included washer and nut (B). Check antenna gasket is evenly seated and nut is sufficiently tightened to create a watertight seal.

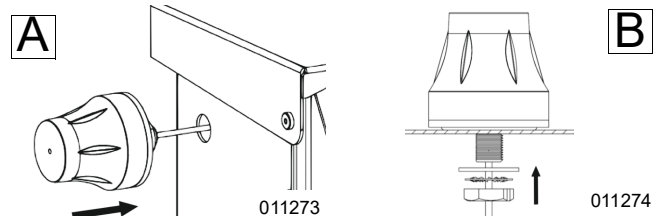


9. **If inverter does not include a mounting bracket:**

- Apply one Dual Lock fastener to the back of LTE modem (on the gray area shown in image C).
- Apply second Dual Lock to alignment marks on inverter left side wall (D).

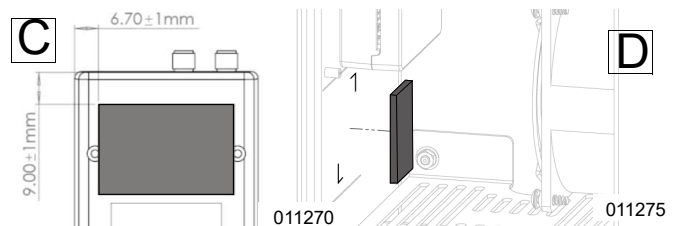


- Follow wiring diagram on the backside of this sheet to complete modem installation.
- Align modem with the top and bottom alignment lines, press the modem until Dual Locks are fully engaged (Image E).

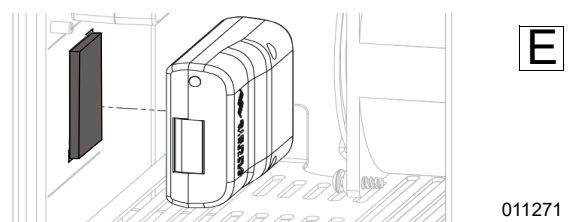

10. If inverter includes a mounting bracket:


- Separate bracket arm by prying top clip with a flat head screwdriver (Image F).
- Follow wiring diagram below to complete modem wiring.
- Place modem onto bracket base and secure with bracket arm (Image G), make sure both top and bottom clips are latched.

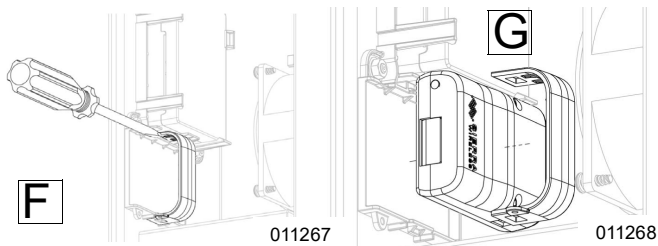

11. Close front cover and power on inverter.

12. Follow install verification steps below to confirm everything is in working order.

Wiring Diagram

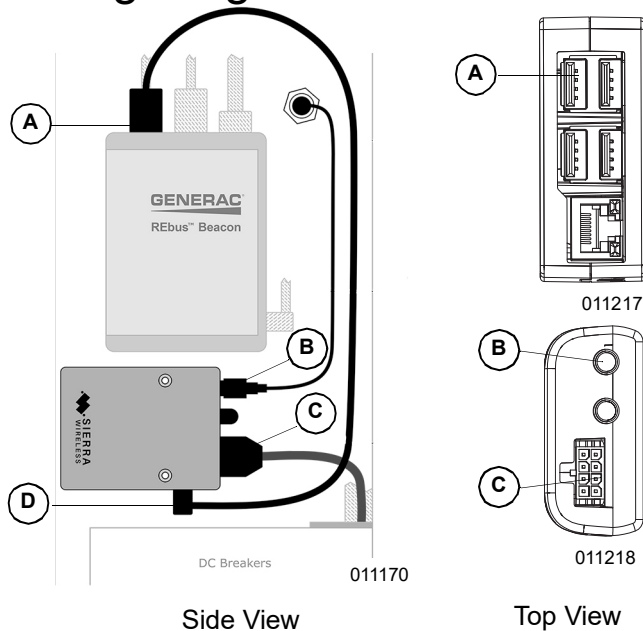

1. Plug the included USB cable into GL7611 modem's USB micro-B port (D), then plug the other end into Beacon's USB type-A port (A).
2. Insert and tighten the SMA connector from LTE antenna assembly into GL7611 modem SMA port (B).

NOTE: The side SMA port should be used: the protective cap on the center SMA port should be left on connector.

3. Locate free hanging 8-pin connector cable from above the DC disconnects. Insert connector into GL7611 modem (C).

Install Verification

NOTE: If inverter is connected to the internet with an Ethernet cable, remove cable and power cycle REbus™ beacon before next step.

- Verify internet light on inverter cover is illuminated solid blue. This will indicate an internet connection has been established through LTE modem.
- If cover light is not solid blue, follow [Internet Connectivity Troubleshooting](#) steps below.

Internet Connectivity Troubleshooting

- Check status light on LTE modem.
- If status light is not blinking green:
 - Open the door and verify SIM card is present and properly installed in LTE modem.
 - Check wiring between LTE modem and inverter.
 - Check antenna connection.
- Power cycle REbus beacon.
 - Remove power cable from REbus beacon.
 - Wait five seconds.
 - Reinstall power cable to beacon.

NOTE: If internet light on inverter still does not turn solid blue, contact Generac customer support at 1-855-635-5186 for further troubleshooting tips.